



# ATG Electronics® LED Freezer light

## USER GUIDE




**NOTE:**

Please read this entire manual to fully understand and safely use this product. Specifications are subject to change without notice. Please visit [www.atgelectronics.com](http://www.atgelectronics.com) for the most recent user guide versions.

**Included in this Box**

- ATG Electronics® LED Freezer lights, 1 PCs
- External Power Supply, 1 PCs
- User Guide, 1 Set
- Accessory Kit, 1 Set, including
  - Wire Nuts, 5 PCs
  - Screws, 3 PCs
  - Clips:2 PCs

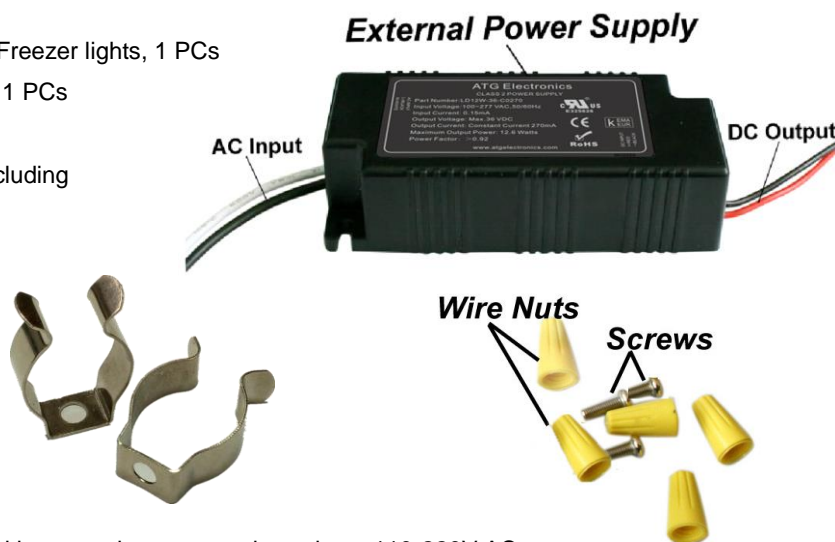

**Important Instructions**

The LED Freezer light with external power supply works at 110-220V AC.

**Installation Steps**

- 1) Turn off the main power before installation.
- 2) Fix the LED Freezer lights to the freezer with screws.
- 3) Wiring the LED Freezer light to the external driver and fix the driver well.
- 4) Connect the source VAC to driver VAC in.

