

sunlite®

INSTALLATION INSTRUCTIONS

88155-SU | LFX/OFL/12W/PC/50K | LED LANDSCAPE SPIKE FIXTURE



Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING: Avoid fire or electrical shock. Space fixture minimum 2" from structures. Keep at least 16" from water (pools, spas). If unsure about electrical installation, consult a qualified electrician. Wear rubber-soled shoes and ground fixture to avoid potential electrical shock. Only use 3-wire 12 gauge grounded extension cords UL rated for outdoor use (not exceeding 100') and should only be plugged into a GFCI outlet.



CAUTION: Turn off the power at fuse or circuit breaker box before installation and maintenance to avoid electric shock. Fixture must be installed according to National Electric Code and local building codes. If you are unsure about wiring consult a qualified electrician. THIS FIXTURE BODY IS ONE PIECE, DO NOT DISASSEMBLE OR MAKE ALTERATIONS.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

Retain these instructions for future maintenance reference.

Installation

1. Holding the spike light by the base of the spike, point fixture in the direction you wish to light and gently push the spike down vertically into the dirt until the base is flush with the ground.

In rocky or hard packed dirt, use a small trowel to dig up rocks and loosen the soil where the fixture is to be placed.

In very hard soils, first drive a pilot hole into the ground with a ground stake or other suitable tool. Insert the spike in the ground and pack the dirt in and around it to secure it.

DO NOT FORCE OR HAMMER SPIKE INTO THE GROUND.

2. Loosen adjustment screw to tilt the fixture up or down. Tighten adjustment screw.

3. Plug power cord into GFCI outlet or three prong extension cord and turn on. If further up/down adjustment is required, turn power off and repeat step 2.