


RLK SERIES Retrofit Lamp Kit for LED Tubes

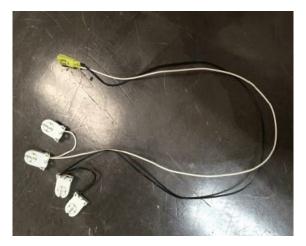

Normally, when retrofitting Fluorescent T8 fixtures to utilize LED T8 bypass lamps requires changing the sockets from Shunted to UnShunted and altering how the sockets are wired. The RLK retrofit lamp kit addresses the common problem by eliminating the hassle of rewiring in the field. The RLK kit provides a pre-wired socket assembly based on the number of LED T8 lamps that will be in the fixture. The kit ncludes pre-wired unshunted sockets plus the companion sockets for the other side of the fixture. The kit is UL listed when used either with our lamps provided or LED T8 lamps that UL Classified for Retrofit. This kit will pay for itself in installation and labor savings.



X1 LED

The most economical, practical and user friendly series of LED fixtures with the energy savings, quality of light, long life and hassle-free maintenance. X1 LED fixtures are UL Listed with the latest LED T8 Bypass lamps. Fixtures provide over 44% energy savings over comparable fluorescent fixtures utilizing less expensive fixtures than the fluorescent version (no ballast required) and have flexibility to change wattage and color temperature any time. Fixture performance will evolve over time with the evolution of the T8 LED lamp technology. Concerned about maintenance with an LED array and driver fixture, X1 LED solves that by utilizing a self contained LED lamp that fits into fixture just like a fluorescent lamp.

Lamp Specifcations:

Our T8 LED lamps are available in 2 or 4 ft sizes in different wattage, lumens and color temperature options. See lamp options and specs at www.texasfluorescents.com/X1LEDLamps. 50,000 Hour Life with 5 Year Warranty Beam Angle 140 Degree Aluminum Base and Aluminum Housing with Glass Cover Operating Temperature: - 20C to 50C Color Temperature: 3500K, 4000K, 5000K G13 Pins (Same as Fluorescent Linear T8 Bipin) AC100 – 277V without Ballast Single Ended or Double Ended Power (If not specified use X1 Single Ended Power)

Optional Dimming Options:

The 4 FT lamps are available with a dimming option. Specially designed dimming lamps require an external driver that runs 1 or 2 lamps. So more than 2 lamps require multiple external drivers. See dimming options and specs at www.texasfluorescents.com/X1LEDdimming.

Emergency Options:

The standard X1 LED Lamps require an inverter or an All-in-one emergency kit that includes LED array, battery and driver. Dimmable T8 LED with external driver works with standard LED EM it. See emergency options and specs at www.texasfluorescents.com/ X1LEDemergency.

RLK	2	X1WR		L118W40		
Series	Lamp Count		Wiring		LED Tul	be Options
RLK Retrofit LED Lamp Kit	1, 2, 3 or 4 Lamps not incuded		Wired for Single Ended LED T8 Tubes Wired for Double Ended LED T8 Tubes	L115W30 L118W30	3500K* Single ei	nded 15W1800 Lumen Included, Not installed nded 18W2100 Lumen Included, Not installed

*Change 30 to 40 or 50 for 4000K or 5000K



Texas Fluorescents 2055 Luna Rd. Suite 142 Carrollton, TX 75006 Phone: 972-247-3171 Fax: 972-247-0200 www.texasfluorescents.com email: sales@texasfluorescents.com

Catalog Number:
Notes:



Installation Instruction

Removal of existing components

- Shut off line power to the fixture at the breaker panel.
- Disconnect and remove existing T8 lamps and discard as a recommended by the provider, as they may contain mercury.

3. Remove ballast cover and set aside.

4. Break the mate on the yellow disconnect to cutoff the ballast from the line wires.




X1LED

RLK Series Retrofit Lamp Kit for LED Tubes





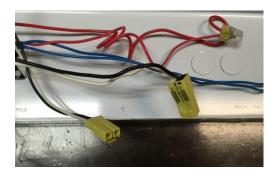


Catalog Number:

Notes:

- 5. Pinch and push on the sockets to remove. Remove all four and let them hang.
- Unfasten screws holding down the ballast. Remove ballast and sockets at once. Discard according to manufacturer's recommendation.

Alternatively, it is possible to cut the wires connecting the sockets to the ballast. Follow warnings printed below before proceeding.



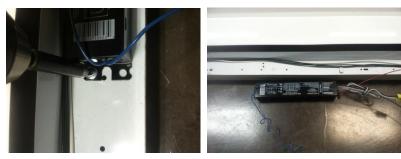

Installation of retrofit kit

7. Insert retrofit sockets in place of the previously removed sockets.



 Reconnect the existing half of the yellow disconnect from the ceiling to the new retrofit disconnect.

www.texasfluorescents.com emaiil: sales@texasfluorescents.com

Texas Fluorescents

2055 Luna Rd. Suite 142 Carrollton, TX 75006

Phone: 972-247-3171 Fax: 972-247-0200





Notes:

- 9. Use existing ground screw shown to ground fixture.
- 10. Adhere sticker reading, "This

luminaire has been modified to operate LED lamps. Do not attempt to install or operate _____ lamps in this luminaire", where "*" represents the luminaire's original light source (i.e.: "fluorescent," "HID," etc.).



- 11. Replace ballast cover and LED tubes
- 12. Turn on line power to the fixture at the breaker panel.

"WARNING - Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components." "WARNING - Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician." "WARNING - Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire." "Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation." "WARNING - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects."

connections at lampholder terminals. Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors."

Catalo	g N	um	ber:
--------	-----	----	------

Notes: